

Reinstalling kesa-aladin on a new computer

The number of allowed parallel installations per license is controlled by the license conditions when purchased. Please contact us if you wish to add more users.

First upon the new target computer, download the install program 'aladinSetup0.exe' for kesa-aladin from our separate emails containing a download link. After the installation is finished, restart kesa-aladin. At the first start you will be asked for the license data but first choose to run in demo mode. Consider if you need to copy/transfer any old settings or projects from the old computer as detailed below. Complete this if required then once done record the old license data which can be found in the main menu: My aladin > License Data

The old version should be deleted from the old computer whilst connected to the Internet. Then enter your license data onto the new computer, with a preferred username and select 'Check and save license data'. Upon the program restart, choose to 'LiveUpdate' possibly via the main menu > > Extras - kesa-aladin-Live Update

The new program should be ready to run.

Transfer your settings and data

By default, kesa-aladin manages (stores) your data in the folder:

"C: \ kesa \ aladin \ aladin DATA"

This folder contains several subfolders for which are provided to saving different data:

Company database C: \ kesa \ Aladin \ Aladin DATA \ COMPANY DETAILS

Notes C: \ kesa \ Aladin \ Aladin DATA \ NOTES

Projects C: \ kesa \ Aladin \ Aladin Data \ Projects

Chimneys C: \ kesa \ Aladin \ Aladin DATA \ CHIMNEYS

MalfunctionC: \ kesa \ Aladin \ Aladin DATA \ INCIDENTS

Texts C: \ kesa \ Aladin \ Aladin DATA \ TEXTS

Connectors C: \ kesa \ Aladin \ Aladin DATA \ CONNECTORS

Heat source C: \ kesa \ Aladin \ Aladin DATA \ BOILER

In order to transfer your data from the old to the new PC, it is easiest to copy the entire folder

"C: \ kesa \ Aladin \ Aladin DATA"

Please do this only once the program is closed.

Your project data

By default, kesa-aladin stores your project data (files with the extension .alp) in the subfolder:

C: \ kesa \ Aladin \ Aladin Data \ Projects

If you only want to transfer your project data from the old PC to the new, copy all project files from this folder. If required, add subfolders to save your data in a structured way.

Copy your address ?

The data saved in kesa-aladin addresses are located in the file 'User_ADR.csv' in the folder:

C: \ kesa \ aladin \ aladin user

Copy your geodetic heights ?

The geodetic heights are in the file 'User_GDH.csv' in the folder:

C: \ kesa \ aladin \ aladin user

Copy your user settings ?

The user settings, templates and recent meetings are located in the folder:

C: \ kesa \ Aladdin \ Aladdin User \ User_1

or.

C: \ kesa \ Aladdin \ Aladdin User \ user_2 etc.

Copy all the files from these folders to the appropriate new folder.

Note : If kesa-aladin has not been installed in the normal location:

C: \ Kesa \ Aladin

then it will be necessary to place all of the above information to that folder.